


7. REMOVE AND INSTALL SHIFT TUBE, IGNITION AND DIMMER SWITCH ASSEMBLIES**REMOVE**


1. Remove parts as shown.

INSTALL


1. Install parts as shown.
2. Position rod in slider hole and install ignition switch. Install lower stud and tighten to 4.0 N-m.
3. Install dimmer switch and depress switch slightly to insert 3/32" drill. Force switch up to remove lash, then tighten screw, and nut to 4.0 N-m.

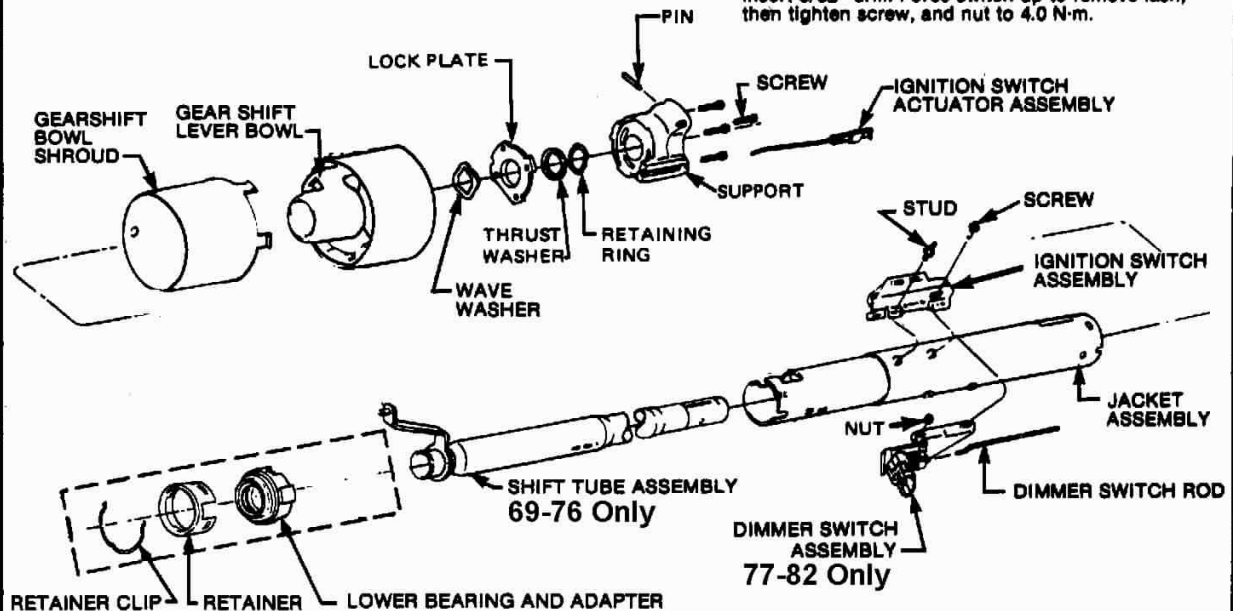


INSTALL IGNITION SWITCH ASSEMBLY

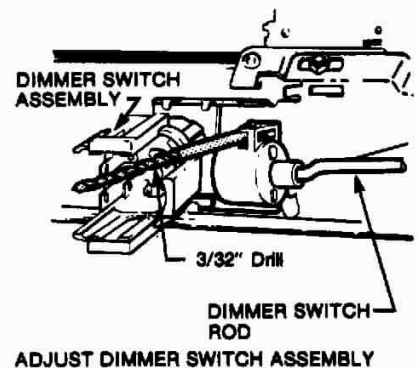


77-82 Only

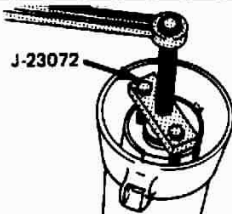

REMOVE SHIFT TUBE ASSEMBLY FROM BOWL

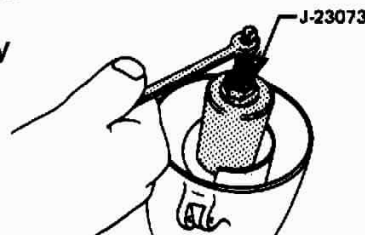

INSTALL SHIFT TUBE ASSEMBLY

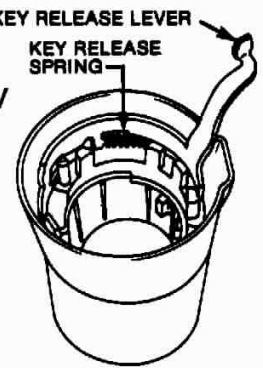

KEY RELEASE LEVER