



1969-76 CORVETTE STANDARD (NON-ADJUSTABLE) STEERING COLUMN BLOWUP

- | | | | |
|------------------------------------|----------------------------------|-------------------------------|------------------------------------------------|
| 1. Shaft Nut | 13. Switch Clip | 25. Bowl Cover | 36. Lower Bearing |
| 2. Cover | 14. Turn Signal Housing | 26. Shift Tube Bowl Bearing | 37. Shaft Stop Ring (2) |
| 3. Lock Plate Retaining Ring | 15. Ignition Switch Sector | 27. Ignition Switch Screws | 38. Steering Shaft |
| 4. Lock Plate | 16. Switch Rack Preload Spring | 28. Ignition Switch | 39. Lower Mounting Plate
(Welded to Jacket) |
| 5. Cancelling Cam | 17. Shaft Lock Bolt | 29. Strg Column Jacket | 40. Shroud |
| 6. Bearing Preload Spring | 18. Switch Rod and Rack Assembly | 30. Shift Tube | 41. Capsule Bracket
(Welded to Jacket) |
| 7. Turn Signal Screws (3) | 19. Thrust Cap | 31. Thrust Spring Washer | 42. Dash Seal |
| 8. Turn Signal Switch | 20. Shaft Lock Bolt Washer | 32. Shift Tube Thrust Spring | |
| 9. Protector Cover | 21. Shift Lever Detent Plate | 33. Lower Bearing Adapter | |
| 10. Turn Signal Housing Screws (4) | 22. Detent Plate Screws | 34. Lower Bearing Retainer | |
| 11. Bearing Thrust Washer | 23. Sector Shaft | 35. Lower Bearing Clip | |
| 12. Key Warning Switch | 24. Shift Tube Bowl | | |

Revised: 27DE2009