

**7. REMOVE AND INSTALL SHIFT TUBE, IGNITION AND DIMMER SWITCH ASSEMBLIES**

**REMOVE**

1. Remove parts as shown.

**INSTALL**

1. Install parts as shown.

2. Position rod in slider hole and install ignition switch. Install lower stud and tighten to 4.0 N-m.

Place shifter in neutral and install shift lever.

