

CORVETTE C3 TILT & TELESCOPING STEERING COLUMN - PAGE 1


1. REMOVE AND INSTALL SHAFT LOCK AND/OR CANCELLING CAM

REMOVE

1. Remove parts as shown.

INSTALL


1. Install parts as shown.

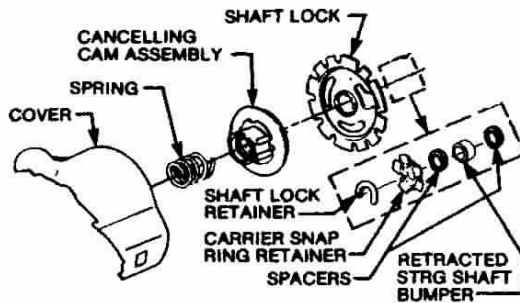

* DIMMER COLUMN ONLY

+ 1979 TO 82 COLUMNS

1969 TO 76 COLUMNS

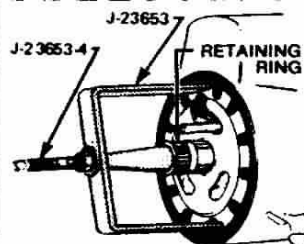

Tighten nut until tool slightly depresses shaft lock
REMOVE AND INSTALL RETAINING RING


2. REMOVE AND INSTALL TURN SIGNAL SWITCH

REMOVE

1. Remove parts as shown.

INSTALL

1. Install parts as shown.

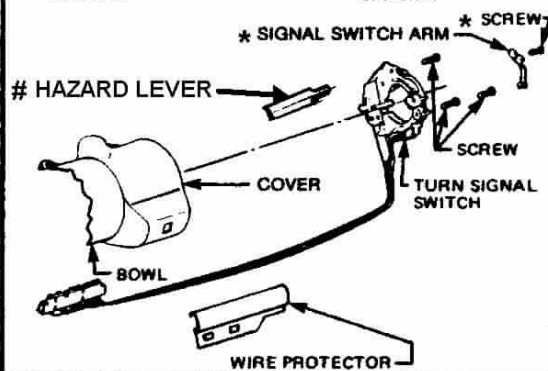


3. REMOVE AND INSTALL IGNITION LOCK AND KEY WARNING BUZZER

REMOVE

1. Turn lock to "RUN" position and remove key warning buzzer.
2. Remove parts as shown.

INSTALL

1. Install lock cylinder.
2. Turn lock to "RUN" position and install key warning buzzer switch.

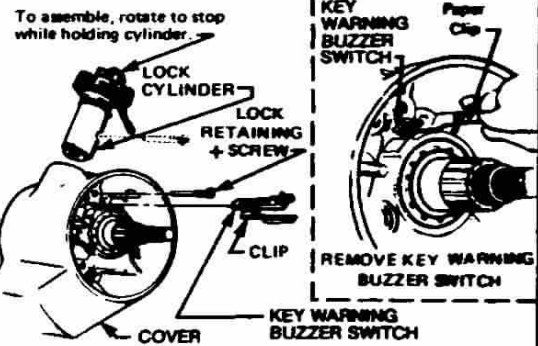



4. REMOVE AND INSTALL COVER AND WIPER SWITCH

REMOVE

1. Remove parts as shown.

INSTALL

1. Install parts as shown.

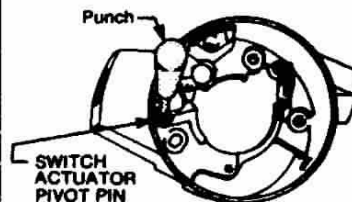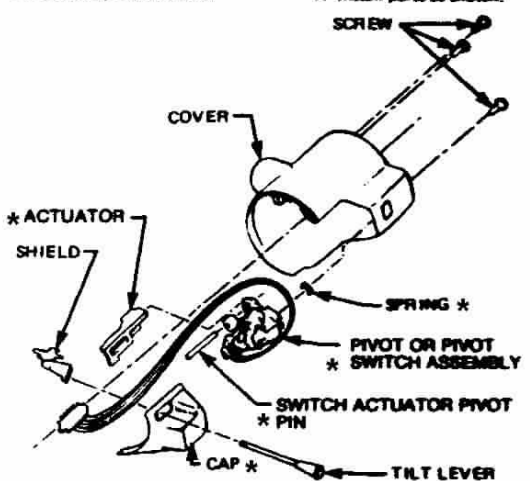

* REMOVE AND INSTALL PIVOT AND SWITCH ASSEMBLY

REVISED: 12FE2006